


Installation of Pneumatic Couplings

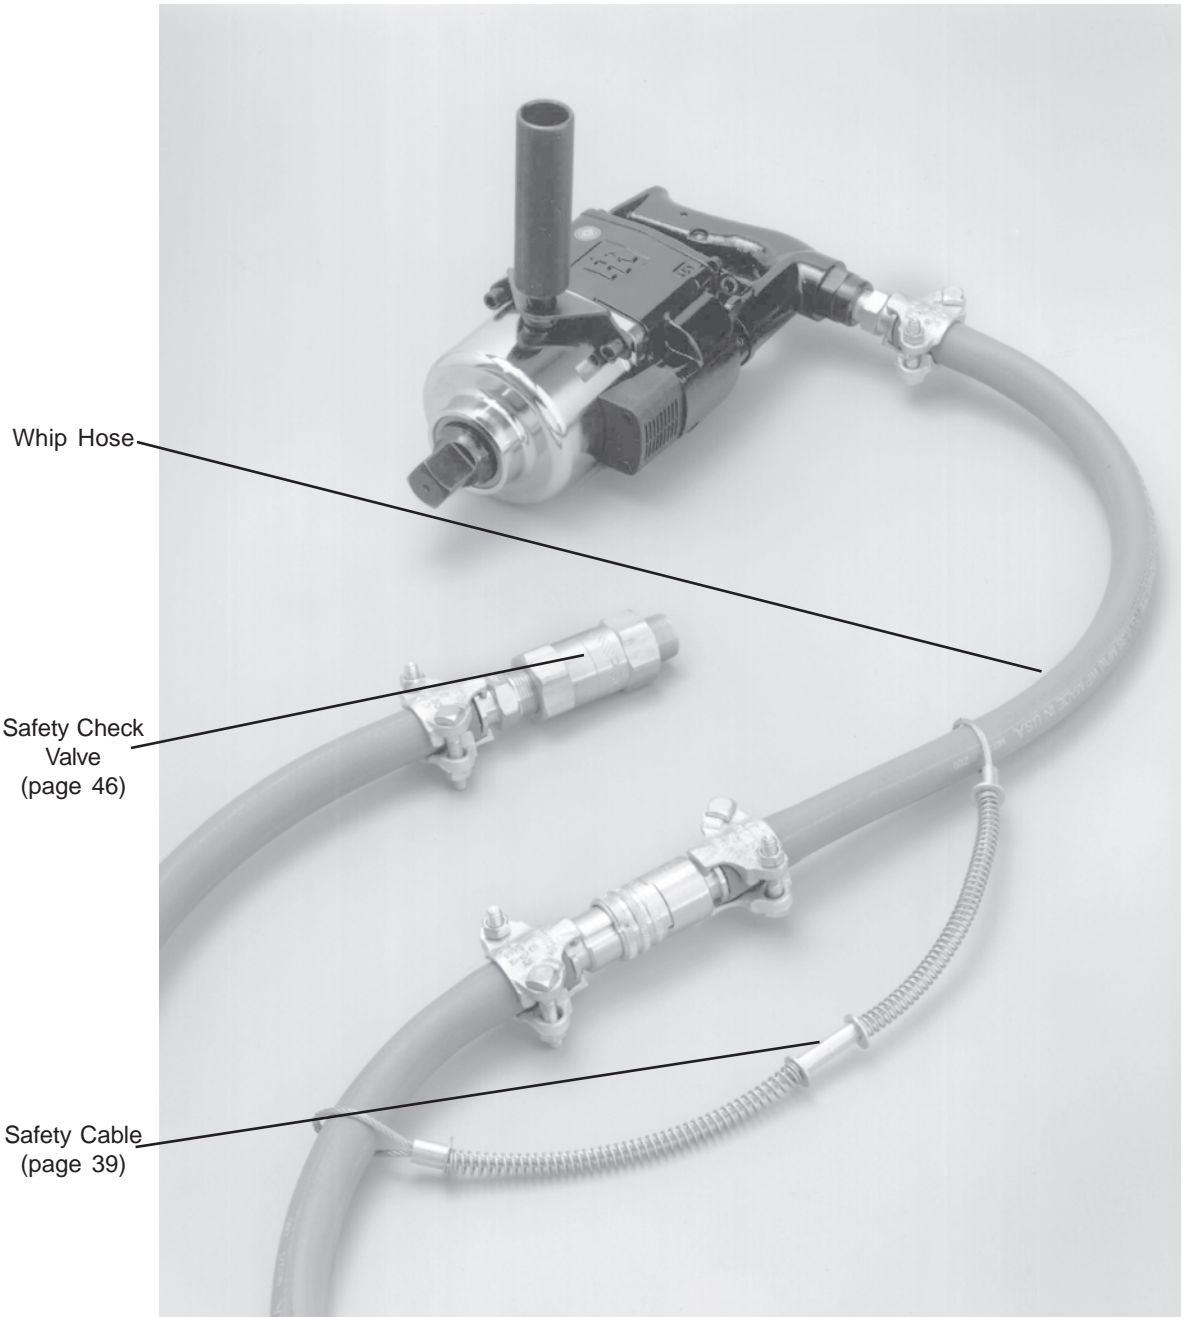

It is important to be safe when installing quick disconnect couplings into a pneumatic circuit. Never install a pneumatic coupling directly into an air tool, use a piece of hose that is at least 18" long, between the tool and the coupling, to prevent damage to the coupling. To protect the operator, safety devices, such as a Safety Check Valve (page 46) and Safety Cable (page 39) should be installed in case there is a hose or coupling failure.