

## Air Fittings and Accessories

# **Surelock Accessories**

### **Blank Ends**

Head	Size	Part #	Price/E	Pkg Qty
small	½" - 1"	SL00	\$11.60	15
medium *	1½" - 2"	SL01	30.80	3





small blank end



medium blank end

# **Three Way Connectors**

Head	Size	Part #	Price/E	Pkg Qty
small	½" - 1"	SL09	\$27.90	15
medium *	1½" - 2"	SL10	83.80	3

\* medium three way connector comes with 1" NPT pipe plug



small three way connector



medium three way connector

#### **Standard Natural Rubber Seals**

Head	Size	Part #	Price/E	Pkg Qty
small	½" - 1"	SLR1	\$1.40	1 1
medium	1½" - 2"	SLR2	1.70	



## Safety Locking Pin

**Warning:** The use of a safety locking pin is necessary to ensure that Surelock couplings will not become accidentally disconnected. This guarantees that the fittings are properly connected as the pin will not go through the holes in both couplings until the couplings are locked into place.



Part #	Price/E	Pkg Qty
SLP1	\$.36	25



# Seal Insertion Tools

When inserting in quantity, seal insertion tools ensure correct alignment of standard Surelock seals.

Head	Size	Part #	Price/E
small	3/8"-1-1/4"	IT100SL	\$124.60
medium	1-1/2" - 2"	IT200SL	124.60



small tool



medium tool

# **Line Strainer and Lubricator**

Size	Description	Pkg Qty	Part #	Price/E
	line strainer	15 1	SLS1 SLL1	\$139.00 290.00
	in- line lubricator		OLL!	

To ensure proper operation the lubricator should be installed within 10 feet of the tool to be lubricated.

#### To adjust the lubricator oil flow:

- Remove the plug. Using a small screw driver turn the jet clockwise to decrease flow, or counter-clockwise to increase flow.
- When adjusted correctly the spray of oil exhausting should cover an area of 10 - 12" in diameter when held 18" away from the subject



line strainer



lubricator

Note: Econovalves are on page 454.

DPL108 97

