



Pneumatic Quick CouplingsSection A

IntroductionA-2
 Coupling Selection GuideA-4
 Interchange Match-up Chart.....A-5
 Industrial Interchange Nipples §A-6
 General PurposeA-8
 Special PurposeA-33
 AccessoriesA-41

Hydraulic Quick CouplingsSection B

IntroductionB-2
 Coupling Selection GuideB-4
 General Purpose.....B-5
 Non-Spill.....B-20
 Connect-Under-PressureB-35
 High PressureB-44
 Mold Coolant LineB-48
 High FlowB-53
 Special Purpose - Miniature.....B-59
 Dust Plugs and CapsB-61
 Ordering InformationB-64
 Promotional Products-Keychains.....B-65

Thermoplastic CouplingsSection C

Coupling Section GuideC-3
 Spectrum SeriesC-4
 PF SeriesC-8
 Ordering InformationC-10

SwivelsSection D

IntroductionD-2
 PS SeriesD-4
 PS Series In-Line Swivels.....D-6
 PS Series 90° SwivelsD-15
 PS Series Repair KitsD-26
 S Series SwivelsD-27
 S Series Repair Kits.....D-33
 Ordering InformationD-5, D-28

Check ValvesSection E

IntroductionE-2
 Selection Guide.....E-4
 Features & General Technical Information.....E-5
 DT SeriesE-6
 DC Series.....E-9
 CV Series.....E-12
 DK Series.....E-14
 CF SeriesE-16
 Ordering InformationE-8, E-11, E-13, E-15, E-17

Diagnostic Products (SensoControl®).....Section F

Introduction.....F-2
 ServiceJunior.....F-5
 SensoControl® Serviceman™F-6
 SensoControl® ServiceMaster™F-11
 SensoControl® TransducerF-14
 PDF Series Flow SensorsF-17
 Test Port CouplingsF-18
 Selection GuideF-27
 Ordering InformationF-27

AppendicesI-V

Fluid Compatibility ChartI
 Safety GuideII
 Alpha Numeric IndexIII
 Glossary of TermsIV
 Offer of SaleV
 Corporate OverviewInside Back Cover

A Pneumatics
B Hydraulics
C Thermoplastics
D Swivels
E Check Valves
F Diagnostic
Appendices