



Installation of Reusable Hose Couplings

①

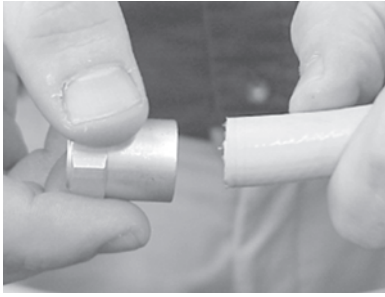


Trim the end of the hose as square as possible.

②

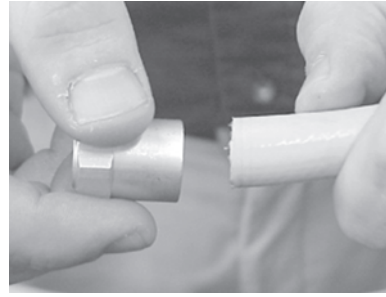


Install ferrule by slipping it onto the end of the hose and twisting it counter-clockwise.

③

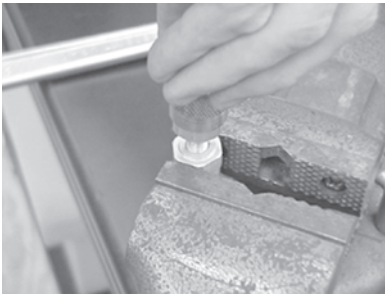

Apply lubricant sparingly to the reusable barb before inserting it into the ferrule.


④

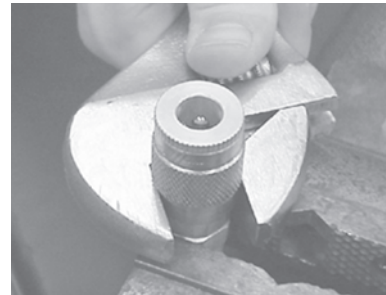

Turn the reusable fitting into the ferrule until coupling is seated against ferrule.


Installation of Push-Loc Hose Connections

①

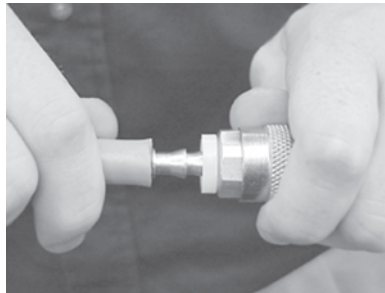

Trim hose end squarely and lubricate the Push-Loc barb and hose. Insert Push-Loc barb into hose until first barb is in the hose.

②

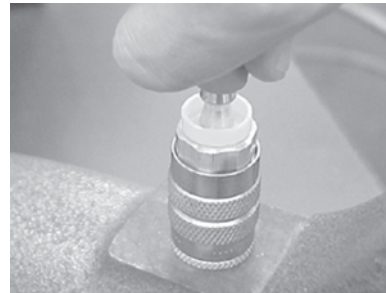

Place the end of the fitting against a flat object and grip the hose one inch from end. Push with a steady force until end of hose is covered by yellow plastic cap.