


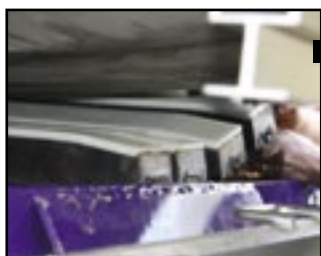

**STEP 6**

*Set bars in place and bolt.*



**STEP 7**

*Slide Support Arms in and bolt.*



**STEP 8**

*Set Skirt Support Bar in place and weld to structure.*



**STEP 9**

*Adjust height and angle of Stationary Support Bar Arm.*



**STEP 10**

*Clean up work area and remove tools.*