
# HOSE BARB

# **Hose Barb Fittings**

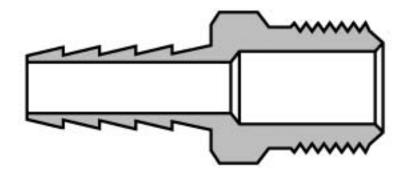

#### •Temperature and Working Pressure Ranges

From  $-40^{\circ}$ F to  $+ 160^{\circ}$ F at 150 PSI maximum.

#### • Tolerance

+/- .02 on all dimensions. Dimension Data can change without notice. Please call us when dimensions are critical.

#### •Material

CA360 Brass for Barstock fittings. CA377 Brass for Forged fittings.

**Note:** These fittings are intended for use with hose clamp, similar type clamp or a crimped ferrule.

### See page 233-247 for hose clamps

See page 224-225 for plastic hose barb fittings See page 25 for stainless steel hose barbs


#### • Assembly Instructions

1- Cut hose cleanly and squarely to length.

2- Slide clamp on hose.

**3-** Lubricate hose. Push hose on fitting until hose bottoms against stop ring or hex.

**4-** Position hose clamp as shown below and secure with a screwdriver or wrench. Maintain "A" dimension noted below for proper clamp positioning.

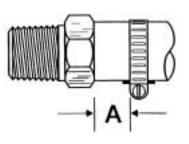

Hose Size	Α
3/16"	1/4"
1/4"	1/4"
5/16"	1/4"
3/8"	1/8"
1/2"	1/8"
5/8"	1/8"
3/4"	1/8"

## **Actual Profile of Hose Barbs**



We Ship World Wide